

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## ASSEMBLING THE FIXTURE (Fig.2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture, including the mounting hardware.
2. Carefully unpack the new fixture and lay all the parts on a clear area. Take care not to lose any parts necessary for installation.
3. Set the arms to suitable position, see figure 2.
4. Attach the loop (J) to the column (K) by turning it clockwise until tight.
5. Attach the column (K) to the fixture body (M) by turning it clockwise until tight.
6. Place the tube (L) over the socket of the fixture body (M).
7. Hook the end of beads (N) and the beads (O) to the loop of the fixture body (M). If you do not desire the beads (O), take off it.

## HANGING THE FIXTURE (Fig.1)

8. Thread the nipple (C) into the loop (F) until snug.
9. Thread the other end of the nipple (C) with the loop attached into the crossbar (D) until snug.
10. Place the lock washer (B) over end of the nipple (C) protruding through the crossbar and thread the hex nut (A) onto the nipple until tight.
11. Take the crossbar assembly and mount to ceiling junction box with the junction box screws (E) (Size: #8-32"1" L). Tighten the screws securely with a screwdriver.
12. Use proper chain pliers to open one end link of the chain and connect it to the fixture loop (J). Close the link.
13. By measuring, determine correct number of links needed for proper hanging height. Using proper chain pliers to disconnect and discard remaining chain.
14. Lace the fixture wires through the chain.
15. Slip loop collar (H) and the canopy (G) and the canopy (I) over the chain.
16. Open the other end link of the chain and hang the fixture on the loop at the ceiling. Close the link.
17. Feed the fixture wires through the loop (F) and nipple (C) and pull until tight.

## CONNECTING THE WIRES (Fig.3)

18. Connect the electrical wire as shown in figure 3, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. If the junction box has no ground wire, attach the bare copper fixture wire to the green ground screw (Screw: #8-32"3/8" L) on the crossbar. Tuck the wire connections neatly into the ceiling junction box.

## COMPLETING THE INSTALLATION (Fig.2)

19. Raise the canopy (I) and the canopy (G) all the way to the ceiling; then raise the loop collar (H) and thread into ceiling loop protruding through canopy.
20. Install the light bulbs (not included) in accordance with the fixture's specifications: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1


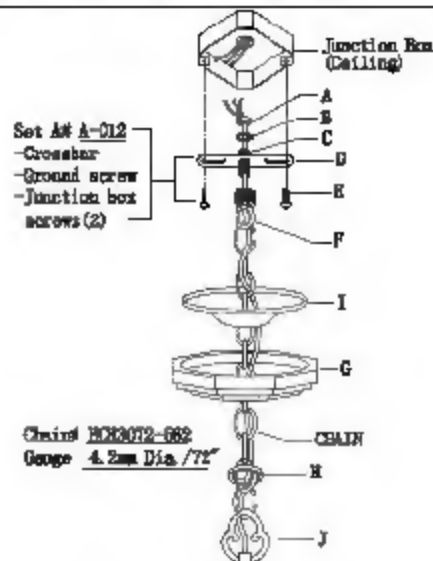


Fig.2

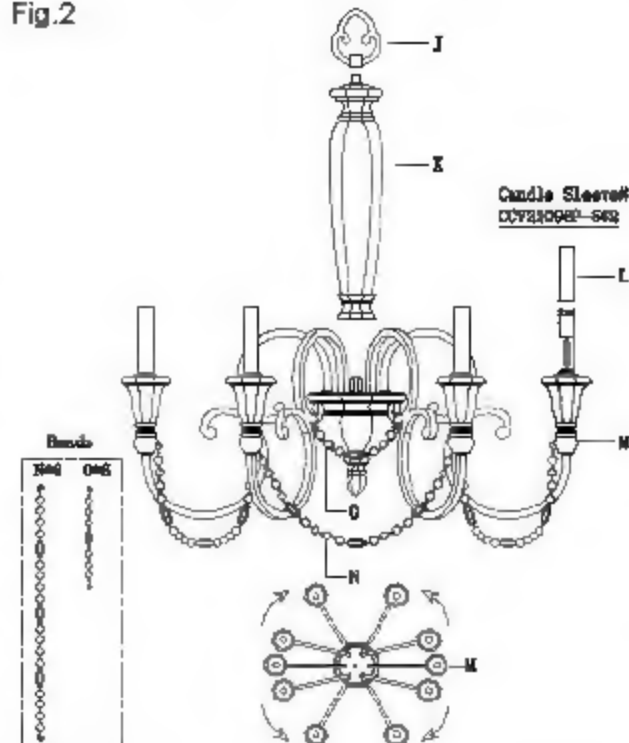

## CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



Fig.3

PICTURE	HOUSE	PICTURE	HOUSE	PICTURE	HOUSE
WIRES	WIRES	WIRES	WIRES	WIRES	WIRES
Black or Smooth	Black	White or Ribbed	White	Bare Copper (Ground)	Green or Bare Copper (Ground)
	(Hot)		(Neutral)		